

























































Original	Sustituto
 Power	 Power
 DVD	 Shift + 2
 Open / Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Return	 Back / Return
 0	 0
 Display	 Display / Media
 Disc Menu	 D.Menu / Top
 Up	 Up

Original	Sustituto
 System Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 I<<	 I<< / Preset-
 Down	 Down
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause / Step	 Pause / Step / Freeze
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Angle	 Info / Angle
 Zoom	 Zoom / Size
 Repeat	 Green / APP / Repeat













































 

























Original	Sustituto	Original	Sustituto
REPEAT A-B	Repeat A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat
PROGRAM	Program	TV/RADIO	TV/Radio /
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
TITLE LP	Title	TITLE SOUND	Sound / Title
SHUFFLE	Shuffle	Prime Video RANDOM	Blue / Prime Video / Random





Original	Sustituto
 Power	 Power
 TV / VCR	 TV/Radio /
 VCR	 Shift + 4
 Eject	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Display	 Display / Media
 Up	 Up
 System Menu	 Menu / Home

Original	Sustituto
 Left	 Left
 OK	 OK
 Right	 Right
 I<<	 I<< / Preset-
 Down	 Down
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause / Step	 Pause / Step / Freeze
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Input	 AV / Input / RDS
 Rec / ITR	 Rec / Rec Mode
 Program	 Shift + TV/Radio / Program
 Clear	 Exit / Cancel / Clear
 LP	 Setup / OPT /
 C.Lock	 Back / Return





	Original	Sustituto		Original	Sustituto
	Show View / Video Plus		Smart / List		

