







 



































 
 
 

 
 
 


 


Original	Sustituto
 Power	 Power
 i	 Info / Angle
 Sources	 AV / Input / RDS
 Up	 Up
 Search	 Shift + Red / Netflix /
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 ←	 Back / Return
 Home	 Menu / Home
 =	 Setup / OPT /
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze

Original	Sustituto
 Rec	 Rec / Rec Mode
 Netflix	 Smart / List
 Windows	 Display / Media
 Rakuten Tv	 TV/Radio /
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Exit/TV	 Exit / Cancel / Clear
 Text	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original		Sustituto		Original		Sustituto	
	7		7				
	8		8				
	9		9				
	0		0				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Tv Guide		Guide / EPG / -/--				

