









 

 





 

 

 

 
 
 









 






 
 
 

 





Original	Sustituto
	 Power
	 D.Menu / Top
	 Picture / Format
	 Mute / Dimmer
	 7
	 Audio / Lang I/II
	 8
	 Smart / List
	 0
	 I<< / Preset-
	 Play / Slow
	 >>I / Preset+
	 Up
	 Down
	 Vol+
	 CH+ / Page+
	 CH- / Page-

Original	Sustituto
	 Vol-
	 Sound / Title
	 >> / Tune+
	 << / Tune-
	 Left
	 Right
	 Shift + Mute / Dimmer
	 Sleep / Timer

