

 








Original	Sustituto
	 Power
	 Display / Media
	 Menu / Home
	 Smart / List
	 AV / Input / RDS
	 Up
	 Down
	 Left
	 Right
	 OK
	 Back / Return
	 Shift + Menu /
	 Guide / EPG / -/--
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Stop / Hold

Original	Sustituto
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Shift + Red / Netflix /
	 Shift + Blue / Prime
	 Shift + Green / APP /
	 Vol+
	 Vol-
	 Mute / Dimmer
	 CH+ / Page+
	 CH- / Page-
	 Exit / Cancel / Clear
	 1
	 2





Original	Sustituto
	3
	4
	5
	6
	7
	8
	9
	0
	Text / Goto
	Options/+ Setup / OPT /

Original	Sustituto

