













 





Original	Sustituto
	Power
	Top Menu
	View/Bonus
	Repeat
	HDMI
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Menu / Home
	Home
	Options
	Back / Return
	[i]/Info
	Up
	Down
	Left

Original	Sustituto
	Right
	OK
	Left
	Play
	Pause
	Right / Preset+
	Left / Tune-
	Stop / Hold
	Right / Tune+
	Vol+
	Vol-
	Mute / Dimmer
	Open/Close
	TV CH+
	TV CH-
	1
	2



