



















 
 
 






 









Original	Sustituto
	 Power
	 Stop / Hold
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 [<>] Picture / Format
	 Search
	 * Menu / Home
	 TV GUIDE Guide / EPG / -/--
	 List
	 SOURCES AV / Input / RDS
	 SMART Smart / List
	 Home
	 TV EXIT Exit / Cancel / Clear
	 Red

Original	Sustituto
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 INFO Info / Angle
	 OPTIONS SETUP Setup / OPT /
	 BACK Back / Return
	 MULTIVIEW MEDIA DISPLAY Display / Media
	 Up
	 Down
	 Left
	 Right
	 OK
	 + Vol+
	 - Vol-
	 NETFLIX Red / Netflix / Search
	 MUTE MUTE Mute / Dimmer
	 + CH+ CH+ / Page+



