



| Original | Sustituto |
|---|---|
|  |  Power |
|  |  AV / Input / RDS |
|  |  Shift + 8 |
|  |  TV/Radio / |
|  |  Eject / Surround |
|  |  Shift + Setup / OPT / Tools |
|  |  OK |
|  |  Exit / Cancel / Clear |
|  |  Green / APP / Repeat |
|  |  D.Menu / Top |
|  |  Setup / OPT / |
|  |  Up |
|  |  Left |
|  |  Shift + OK |
|  |  Right |
|  |  Down |
|  |  Back / Return |

| Original | Sustituto |
|---|---|
|  |  Display / Media |
|  |  << / Tune- |
|  |  Play / Slow |
|  |  Pause / Step / Freeze |
|  |  >> / Tune+ |
|  |  I<< / Preset- |
|  |  >>I / Preset+ |
|  |  Rec / Rec Mode |
|  |  Stop / Hold |
|  |  Vol+ |
|  |  Mute / Dimmer |
|  |  CH+ / Page+ |
|  |  Vol- |
|  |  CH- / Page- |
|  |  1 |
|  |  0 |
|  |  3 |





| Original | | Sustituto | | Original | | Sustituto | |
|----------|----------|-----------|------------------------|----------|--|-----------|--|
| | 4 | | 4 | | | | |
| | 5 | | 5 | | | | |
| | 6 | | 6 | | | | |
| | 7 | | 7 | | | | |
| | 8 | | 8 | | | | |
| | 9 | | 9 | | | | |
| | Subtitle | | Subtitle / EQ | | | | |
| | 2 | | 2 | | | | |
| | Audio | | Audio / Lang I/II | | | | |
| | Rec Mode | | Shift + Rec / Rec Mode | | | | |
| | Timer | | Sleep / Timer | | | | |
| | Edit | | Zoom / Size | | | | |
| | Showview | | Smart / List | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

