 




 

 

 


 

 

 





	Original	Sustituto	Original	Sustituto
	Power	 Power		
AUX	AUX	 7		
COAX	COAX	 2		
AUDIO-IN	Audio In	 Audio / Lang I/II		
OPTICAL	Optical	 Zoom / Size		
	Bass+	 Up		
	Vol+	 Vol+		
	Treble+	 CH+ / Page+		
	Bass-	 Down		
	Vol-	 Vol-		
	Treble-	 CH- / Page-		
	Mute	 Mute / Dimmer		
SURR	SURR	 TV/Radio /		

