
 








 

 

 

 

 

 

 
 
 

 



 

 







 

 

 

 

 
 

 

 

 



 





Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 TXT	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Sustituto
 3D	 Shift + 3
 ?	 Info / Angle
 @	 D.Menu / Top
 Menu	 Menu / Home
 Up	 Up
 ←	 Back / Return
 →	 Left
 OK	 OK
 ↓	 Right
 Tools	 Setup / OPT /
 ↓	 Down
 Guide/Home	 Guide / EPG / -/--
 Guide/Home	 Smart / List
 Vol+	 Vol+
 Source	 AV / Input / RDS
 PR+	 CH+ / Page+
 Vol-	 Vol-





Original	Sustituto	Original	Sustituto
	Mute		Mute / Dimmer
	PR-		CH- / Page-
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec List		Display / Media
	OQ		Audio / Lang I/II
	[-]		Subtitle / EQ

Original	Sustituto

