



Original	Sustituto
Standby/on	Power
Open/close	Eject / Surround
CD	Shift + 3
USB	Shift + 8
Tuner	Shift + 6
Audio In	Audio / Lang I/II
BT Audio	Shift + 9
Clock/Timer	Shift + Sleep / Timer
Sleep	Sleep / Timer
1	1
2	2
3	3
Equalizer	Setup / OPT /
4	4
5	5
6	6
P.Bass	Sound / Title

Original	Sustituto
7	7
8	8
9	9
Bass/Treble	Shift + Sound / Title
Clear	Exit / Cancel / Clear
0	0
Repeat	Green / APP / Repeat
Random	Blue / Prime Video / Random
Display	Display / Media
Up/Tune+	Up
Folder	Text / Goto
Left	Left
Enter	OK
Right	Right
Menu	Menu / Home
Down/Tune-	Down
Memory/Program	TV/Radio /





Original	Sustituto	Original	Sustituto
Preset+	>>  / Preset+		
Mute	Mute / Dimmer		
Vol+	Vol+		
Preset-	<< / Preset-		
Dimmer	Shift + Mute / Dimmer		
Vol-	Vol-		
<< <<	<< / Tune-		
Stop	Stop / Hold		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
>> >>	>> / Tune+		
ST/Mono	Shift + Audio / Lang I/II		
RDS ASPM	Shift + Smart / List		
RDS PTY	Smart / List		
RDS Display	Shift + Display / Media		

