
 



 
 







Original	Sustituto
 POWER	 Power
 SCREEN SIZE	 3D
 AUTO SET UP	 Options
 MUTE	 Mute
 ZOOM	 Eject
 PC 1	 Shift + 1
 PC 2	 Shift + 2
 DISPLAY	 Info
 TV	 TV/R
 SCART	 AV
 DVI	 Shift + 3
 PLASMA MENU	 D. Menu
 PLASMA MENU	 Shift + D. Menu
 UP / CH +	 Up
 UP / CH +	 Ch +
 DOWN / CH -	 Down
 DOWN / CH -	 Ch -

Original	Sustituto
 RIGHT	 Right
 LEFT	 Left
 SET	 Ok
 VOL +	 Vol +
 VOL -	 Vol -
 MENU TV	 Menu
 PIP ON / OFF TV	 Media
 PIP SWAP TV	 I<<
 PIP MOVE TV	 >>I
 PIP TYPE TV	 Shift + Media
 AUDIO TV	 Dual
 CLOCK TV	 Sleep
 1 TV	 1
 2 TV	 2
 3 TV	 3
 4 TV	 4
 5 TV	 5



