


 


 
 

 



 

 













 

 
 


 



 



 
 


 







 







 








Original	Sustituto	Original	Sustituto
 Power	 Power	 Left	 Left
 BD / DVD	 1	 Home	 Smart
 CBL / SAT	 2	 Right	 Right
 Game	 3	 Back	 Back
 NET	 4	 Vol +	 Vol +
 BT AUDIO	 5	 Home	 Menu
 USB	 6	 Vol -	 Vol -
 Tuner	 7	 Mute	 Mute
 TV	 8	 Auto / Direct	 List
 CD	 9	 SURR	 Dual
 <	 Ch -	 I<<	 I<<
 >	 Ch +	 Play / Pause	 Play
 AV Adjust	 AV	 Play / Pause	 Pause
 i / Status	 Info	 >>I	 >>I
 Up	 Up	 Repeat / Shuffle / Clear	 Exit
 Enter	 Ok	 + FAV	 Pre Ch
 Down	 Down	 Mode	 Media

