









Original	Sustituto
 Power Receiver	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Adv. Surr.	 Sound / Title
 Audio	 Audio / Lang I/II
 iPod CTRL	 Eject / Surround
 A.ATT.	 Picture / Format
 HMG	 Zoom / Size
 Sleep	 Sleep / Timer
 TV	 TV/Radio /
 Top Menu	 D.Menu / Top

Original	Sustituto
 DVR / BDR	 Setup / OPT /
 MCACC	 Text / Goto
 Input Select	 AV / Input / RDS
 Home Menu	 Menu / Home
 Up	 Up
 D.Access	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 T.Edit	 Exit / Cancel / Clear
 Down	 Down
 Return	 Back / Return
 Master Volume	 Vol+
 Signal Sel	 Smart / List
 CH Level	 CH+ / Page+
 Master Volume	 Vol-
 Disp	 Display / Media





Original	Sustituto
2nd Return	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Video	Guide / EPG / -/--
0	0
BD	Fav / Marker / PC
Class	Red / Netflix / Search
Repeat	Green / APP / Repeat
Enter (Class)	Yellow / YouTube / Repeat
Random	Blue / Prime Video / Random

Original	Sustituto
Dimmer	Shift + Mute / Dimmer
Tune-	Shift + << /
Tune+	Shift + >> /
Preset -	Shift + I<< / Preset-
Preset +	Shift + >>I / Preset+
Band	Shift + Sound / Title
Stereo	Shift + Audio / Lang I/II
Auto / Alc / Direct	Shift + Picture / Format
ADPT	Shift + TV/Radio / Program
MPX	Shift + D.Menu / Top Menu
Status	Shift + Setup / OPT / Tools
Phase CTRL	Shift + Text /
Input Select ~	Shift + AV / Input / RDS
Standard	Shift + Menu /
2nd Up	Shift + Up
2nd Left	Shift + Left
2nd Enter	Shift + OK



