









 

Original	Sustituto
Power Receiver	Power
Input Select	AV / Input / RDS
DVD / LD	Shift + 2
TV/SAT	Shift + 1
TV/SAT	Shift + 0
DVR/VCR	Shift + 4
CD	Shift + 3
CD-R/Tape	Shift + 5
TUNER	Shift + 6
Standard	Red / Netflix / Search
Advanced	Green / APP / Repeat
Stereo / Direct	Yellow / YouTube / Repeat
Midnight /	Blue / Prime Video / Random
CH. Select	Shift + OK
Level -	Shift + Down
Level +	Shift + Up
Test Tone	Text / Goto

Original	Sustituto
Mute	Mute / Dimmer
Effect -	Shift + Left
Effect +	Shift + Right
FL Dimmer	Shift + Mute / Dimmer
Master Volume-	Vol-
Master	Vol+
Top Menu	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Left
Enter	OK
Right	Right
Audio	Audio / Lang I/II
Down	Down
Sleep	Sleep / Timer
Guide	Shift + Guide / EPG / -/-
<<	<< / Tune-





Original	Sustituto
 Play	 Play / Slow
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 1	 1
 2	 2
 3	 3
 Enter / Disc	 Fav / Marker / PC
 4	 4
 5	 5
 6	 6
 ·/+10	 Guide / EPG / -/--
 7	 7
 8	 8
 9	 9

Original	Sustituto
 0	 0
 Channel+	 CH+ / Page+
 Channel-	 CH- / Page-
 Setup	 Setup / OPT /





Original	Sustituto
Power Source	Power
DVDLD	+ Shift + 2
Top Menu	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Left
Enter	OK
Right	Right
Audio	Audio / Lang I/II
Down	Down
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
Stop	Stop / Hold
>>I	>>I / Preset+

Original	Sustituto
1	1
2	2
3	3
Enter / Disc	Fav / Marker / PC
4	4
5	5
6	6
+10	Guide / EPG / -/-
7	7
8	8
9	9
0	0





Original	Sustituto
Power Source	Power
Tuner	Shift + 6
Tune+	>> / Tune+
Tune+	Up
Menu	Menu / Home
ST-	Left
Enter	OK
ST+	Right
Tune-	<< / Tune-
Tune-	Down
Display	Display / Media
Class	Pause / Step / Freeze
MPX	Stop / Hold
D.Access	>>I / Preset+
1	1
2	2
3	3

Original	Sustituto
4	4
5	5
6	6
7	7
8	8
9	9
0	0

