

 





























 





Original	Sustituto
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Smart / List
	 0
	 Guide / EPG / -/-
	 Menu / Home
	 AV / Input / RDS
	 Up

Original	Sustituto
	 Left
	 OK
	 Right
	 Back / Return
	 Down
	 Exit / Cancel / Clear
	 Vol+
	 Info / Angle
	 CH+ / Page+
	 Vol-
	 Setup / OPT /
	 CH- / Page-
	 TV/Radio /
	 Audio / Lang I/II
	 Text / Goto
	 Subtitle / EQ
	 Shift + Smart / List





Original	Sustituto
Rec	Rec / Rec Mode
Stop	Stop / Hold
PRE-CH	Fav / Marker / PC
<<	<< / Tune-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>	>> / Tune+
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Sustituto

