






 

 

 



 
 


 



 













 



 

 



 


 
 



 
















Original	Sustituto	Original	Sustituto
 Standby	 Power	 Tv/Radio	 TV/R
 Source	 AV	 Display	 Info
 1	 1	 Menu	 Menu
 2	 2	 Exit	 Exit
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 Ok
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0/10	 0	 Mute	 Mute
 FAV/Program	 Pre Ch	 EPG	 Guide
 Recall/10+	 Back	 Media	 Media
 P.Mode	 Format	 CH+	 Ch +
 S.Mode	 Shift + Dual	 CH-	 Ch -
 Sleep	 Sleep	 Rec	 Rec





Original		Sustituto		Original		Sustituto	
	T.Shift		Smart		Green/A-B		Green
	I/II/Audio		Dual		Yellow/Angle		Yellow
	Size/Aspect		3D		Blue/Repeat		Blue
	D.Setup		Options				
	D.Menu		D. Menu				
	Title		Text				
	Eject		Eject				
	Play		Play				
	Pause/Hold		Pause				
	Stop/Reveal		Stop				
	<</Text		<<				
	>>/Subpage		>>				
	I<</Index		I<<				
	>>I/Mix		>>I				
	Zoom		Shift + Eject				
	Subtitle		Subt				
	Red/Goto		Red				

