




Original	Sustituto		
	Power		Power
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Source		AV / Input / RDS
	Play/Pause / Size		Zoom / Size
	Play/Pause / Size		Play / Slow
	Play/Pause / Size		Pause / Step / Freeze
	EPG		Guide / EPG / -/--
	Audio		Audio / Lang I/II
	R.List / Index		Display / Media
	FAV		Fav / Marker / PC
	Hold		Shift + Stop /
	Red / <<<		<<< / Tune-
	Red / <<<		Red / Netflix / Search
	Green / <		<< / Preset-
	Green / <		Green / APP / Repeat
	Yellow / >		Yellow / YouTube / Repeat

Original	Sustituto		
	Yellow / >		>> / Preset+
	Blue / >>>		>>> / Tune+
	Blue / >>>		Blue / Prime Video / Random
	Menu		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	CHL		Smart / List





Original		Sustituto	
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Subtitle		Subtitle / EQ
	0		0
	Text		Text / Goto

Original		Sustituto	

