



 

 

 





 
 

 
 

 



 



 









Original	Sustituto
 POWER	 Power
 INFO	 Info / Angle
 HDMI CONTROL	 Smart / List
 SLEEP	 Sleep / Timer
 SCREEN	 Picture / Format
 SOURCE	 AV / Input / RDS
 PRESETS	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 ZOOM/RED/▲	 Zoom / Size
 ZOOM/RED/▲	 Shift + CH+ /
 ZOOM/RED/▲	 Red / Netflix / Search
 4	 4
 5	 5
 6	 6
 REPEAT/GREEN/▼	 Shift + CH- / Page-

Page-

Original	Sustituto
 REPEAT/GREEN/▼	 Green / APP / Repeat
 7	 7
 8	 8
 9	 9
 ROOT/YELLOW	 Yellow / YouTube / Repeat
 RETURN	 Back / Return
 0	 0
 MENU	 Menu / Home
 TITLE/BUE	 Sound / Title
 TITLE/BUE	 Blue / Prime Video / Random
 UP	 Up
 LEFT	 Left
 OK/SELECT	 OK
 RIGHT	 Right
 DOWN	 Down
 P+	 CH+ / Page+
 P-	 CH- / Page-





Original	Sustituto
	VOL  Vol-
	VOL  Vol+
	 Fav / Marker / PC
	 Audio / Lang I/II
	 Subtitle / EQ
	 Mute / Dimmer
	 Shift + Back / Return
	 Guide / EPG / -/-
	 D.Menu / Top
	 Text / Goto
	 Exit / Cancel / Clear
	 Display / Media
	 Shift + Info / Angle
	 Shift + Red / Netflix /
	 Rec / Rec Mode
	 Stop / Hold
	 Play / Slow

Original	Sustituto
	 Pause / Step / Freeze
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+

