 

 



 

 



 

 























| Original   | Sustituto  |
|--|--|
|  Standby  |  Power                        |
|  Auto     |  Smart / List                 |
|  Mute     |  Mute / Dimmer                |
|  1        |  1                            |
|  2        |  2                            |
|  3        |  3                            |
|  4        |  4                            |
|  5        |  5                            |
|  6        |  6                            |
|  7        |  7                            |
|  8       |  8                           |
|  9      |  9                          |
|  -/--   |  Shift + Guide / EPG / -/-- |
|  0      |  0                          |
|  Recall |  Back / Return              |
|  Vol+   |  Vol+                       |
|  Aspect |  Shift + Picture / Format   |

| Original   | Sustituto   |
|--|---|
|  Audio    |  Audio / Lang I/II       |
|  CH+      |  CH+ / Page+             |
|  Vol-     |  Vol-                    |
|  Display  |  Display / Media         |
|  CH-      |  CH- / Page-             |
|  Up       |  Up                      |
|  Left     |  Left                    |
|  OK       |  OK                      |
|  Right    |  Right                   |
|  Menu     |  Menu / Home             |
|  Down    |  Down                   |
|  Exit   |  Exit / Cancel / Clear |
|  Input  |  AV / Input / RDS      |
|  P.Mode |  Picture / Format      |
|  S.Mode |  Sound / Title         |
|  Sleep  |  Sleep / Timer         |
|  FAV    |  Fav / Marker / PC     |





| Original | Sustituto               |
|----------|-------------------------|
| FAV-     | Shift + CH- /           |
| FAV+     | Shift + CH+ /           |
| EPG      | Guide / EPG / -/--      |
| Text     | Text / Goto             |
| Hold     | Shift + Stop /          |
| Tv/Radio | TV/Radio /              |
| Subtitle | Subtitle / EQ           |
| Index    | Info / Angle            |
| Size     | Zoom / Size             |
| Reveal   | Setup / OPT /           |
| Subpage  | Eject / Surround        |
| Media    | Shift + Display / Media |
| Play     | Play / Slow             |
| Pause    | Pause / Step / Freeze   |
| <<       | << / Tune-              |
| >>       | >> / Tune+              |
| Rec      | Rec / Rec Mode          |

| Original | Sustituto                   |
|----------|-----------------------------|
| Stop     | Stop / Hold                 |
| I<<      | I<< / Preset-               |
| >>I      | >>I / Preset+               |
| Red      | Red / Netflix / Search      |
| Green    | Green / APP / Repeat        |
| Yellow   | Yellow / YouTube / Repeat   |
| Blue     | Blue / Prime Video / Random |

