



Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	S.Mode		Sound / Title
	Audio/Reveal		Audio / Lang I/II
	Zoom/Subpage		Subtitle / EQ
	P.Mode		Picture / Format
	Size		Zoom / Size
	Sleep		Sleep / Timer
	D.Menu		D.Menu / Top
	Text		Text / Goto
	Input		AV / Input / RDS
	LCD Menu		Menu / Home
	Up		Up
	Index		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Recall		Back / Return
	Vol+		Vol+
	DVD Setup		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	1		1
	2		2





Original	Sustituto	Original	Sustituto
3	3	ASPECT	Aspect
4	4	D.SU	D.Subt.
5	5	GOT	Goto
6	6	ANGLE	Angle
7	7	PGUP SLOW	Slow/PgUp
8	8	D.DISP	D.Disp
9	9	PGDW STE	Step/PgDn
-/--	-/--		
0	0		
AUTO	Auto		
PROGRAM	Red/Program		
INTRO	Green/Intro		
REPEAT	Yellow/Repeat		
A-B	Blue/A-B		
HOLD	Hold		
TITLE	Title		
NICAM	Nicam		

Original	Sustituto	Original	Sustituto
		SHIFT + FORMAT	Shift + Picture / Format
		SHIFT + SIZE	Shift + Zoom /
		SHIFT + GOTO	Shift + Text /
		SHIFT + ANGLE	Shift + Info / Angle
		SHIFT + CH PAGE	Shift + CH+ /
		SHIFT + MEDIA DISPLAY	Shift + Display / Media
		SHIFT + CH PAGE	Shift + CH- /

