



 



 

 



 

 

 

 

 

 

 



 







Original	Sustituto
	 Power
	 AV / Input / RDS
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Info / Angle
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+

Original	Sustituto
	 Vol-
	 Picture / Format
	 CH- / Page-
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Menu / Home
	 Display / Media
	 Up
	 Left
	 OK
	 Right
	 Back / Return
	 Shift + Back / Return
	 Down
	 Exit / Cancel / Clear





Original	Sustituto
	AD Audio / Lang I/II
	Subtitle Subtitle / EQ
	Text Text / Goto
	Radio TV/Radio /
	I<< / Preset-
<< button icon"/>	<< / Tune-
>> button icon"/>	>> / Tune+
>>I button icon"/>	>>I / Preset+
	Rec Rec / Rec Mode
	Stop / Hold
	Play / Slow
	Pause / Step / Freeze

Original	Sustituto

