










 




Original	Sustituto
	 Power
	 AV / Input / RDS
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Info / Angle
	 0
	 Guide / EPG / -/--
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+

Original	Sustituto
	 Vol-
	 Menu / Home
	 CH- / Page-
	 Up
	 Left
	 OK
	 Right
	 Back / Return
	 Down
	 Exit / Cancel / Clear
	 I<< / Preset-
	 << / Tune-
	 >> / Tune+
	 >>  / Preset+
	 Rec / Rec Mode
	 Stop / Hold
	 Play / Slow



