

 
 

 

 




 




 








 
 

 



 


Original	Sustituto	Original	Sustituto
PWR On/Off	 Power	1. ?	 1
Mute	 Mute	2abc	 2
Subt.List	 Subt	3def	 3
Sleep Timer	 Sleep	4ghi	 4
Zoom	 Eject	5jkl	 5
TV/SAT	 AV	6mno	 6
Menu	 Menu	7pqrm	 7
Menu Up	 Up	8tuv	 8
Display	 Info	9wxyz	 9
Menu Left	 Left	Guide Pilote	 Guide
OK Enter	 Ok	0/10	 0
Menu Right	 Right	FAV Pref.	 Pre Ch
Menu Down	 Down	Red	 Red
Volume+	 Vol +	Green	 Green
CH/Page+	 Ch +	Yellow	 Yellow
Volume-	 Vol -	Browse	 Blue
CH/Page-	 Ch -	LNB F.Forward	 Smart

