







 




 






 










 


 


 



 

 









 
 


 





 


 







 







Original	Sustituto	Original	Sustituto
 Standby	 Power	 Stop	 Stop / Hold
 1	 1	 Play/Pause	 Play / Slow
 2	 2	 Play/Pause	 Pause / Step / Freeze
 3	 3	 I>/Resume	 Shift + Play /
 4	 4	 Surround	 Eject / Surround
 5	 5	 Sound	 Sound / Title
 6	 6	 Night	 Shift + Sleep / Timer
 7	 7	 Mute	 Mute / Dimmer
 8	 8	 Repeat	 Green / APP / Repeat
 9	 9	 Repeat A-B	 Yellow / YouTube / Repeat
 0	 0	 Sleep	 Sleep / Timer
 Vol+	 Vol+	 DIM	 Shift + Mute / Dimmer
 Vol-	 Vol-	 Subw +	 Up
 Left	 Left	 Rear +	 Shift + CH+ /
 Right	 Right	 Center +	 CH+ / Page+
 I<<	 I<< / Preset-	 Tv Vol+	 Shift + Vol+
 >>I	 >>I / Preset+	 Subw -	 Down

Original	Sustituto	Original	Sustituto
 Stop	 Stop / Hold	 Play/Pause	 Play / Slow
 Play/Pause	 Pause / Step / Freeze	 I>/Resume	 Shift + Play /
 Surround	 Eject / Surround	 Sound	 Sound / Title
 Night	 Shift + Sleep / Timer	 Mute	 Mute / Dimmer
 Repeat	 Green / APP / Repeat	 Repeat A-B	 Yellow / YouTube / Repeat
 Sleep	 Sleep / Timer	 DIM	 Shift + Mute / Dimmer
 Subw +	 Up	 Rear +	 Shift + CH+ /
 Center +	 CH+ / Page+	 Tv Vol+	 Shift + Vol+
 Subw -	 Down		





Original		Sustituto		Original		Sustituto	
	Standby		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Up		Up				
	Left		Left				
	OK		OK				
	Right		Right				
	Down		Down				





Original		Sustituto	
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Original		Sustituto	

