










 
 
 






 


 

 
 





 









 





 














 



Original	Sustituto
 Power	 Power
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Play	 Play / Slow
 >>	 >> / Tune+
 <<	 << / Tune-
 Guide	 Guide / EPG / -/--
 3D	 Shift + 3
 Smart Tv	 Smart / List
 Home	 Menu / Home
 Ambilight	 Display / Media
 [ <> ]	 Picture / Format
 TV	 TV/Radio /
 OK	 OK
 Up	 Up
 Down	 Down

Original	Sustituto
 Right	 Right
 Left	 Left
 [i]/Info	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Back	 Back / Return
 List	 Shift + Smart / List
 III/Options	 Setup / OPT /
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1





Original	Sustituto	Original	Sustituto
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Subtitle	 Subtitle / EQ		
 Text	 Text / Goto		
 Source	 AV / Input / RDS		

