



















Original	Sustituto	Original	Sustituto
Power	 Power	5	 5
Mute	 Mute / Dimmer	6	 6
Sleep	 Sleep / Timer	7	 7
Source	 AV / Input / RDS	8	 8
Menu	 Menu / Home	9	 9
E	 OK	0	 0
Recall	 Back / Return		
Vol+	 Vol+		
System	 Smart / List		
CH+	 CH+ / Page+		
Vol-	 Vol-		
Normal	 Display / Media		
CH-	 CH- / Page-		
1	 1		
2	 2		
3	 3		
4	 4		

