
 
 

 



 
 







 

 
 


 
 


 








Original	Sustituto	Original	Sustituto
On/Off	 Power	Menu Off	 Exit
Mute	 Mute	Menu Down	 Down
Reveal	 D. Menu	Volume+	 Vol +
Txt Stop	 Stop	Chan.Up	 Ch +
Info	 Info	Menu audio	 Dual
Subt.List	 Subt	Volume-	 Vol -
Sleep Timer	 Sleep	Chan.Down	 Ch -
Return TV	 TV/R	1	 1
Text	 Text	2	 2
Txt Expand	 Eject	3	 3
TV/AV	 AV	4	 4
Menu	 Menu	5	 5
Menu Up	 Up	6	 6
Display	 Shift + Info	7	 7
Menu Left	 Left	8	 8
OK Enter	 Ok	9	 9
Menu Right	 Right	Guide -/-- 1.	 Guide



Original	Sustituto	Original	Sustituto
0/10	 0		
2.Fav P/C 2.	 Pre Ch		
Red	 Red		
Green	 Green		
Surround	 +  Shift + Dual		
Level L	 Smart		
Level R/Woofers	 Media		
Tone-	 List		
Nicam/Mono	 Options		
Yellow	 Yellow		
Blue	 Blue		

