


 

 

 










 





 
 

 
 


 
 





 
 




Original	Sustituto
 Power	 Power
 Eject	 Shift + Eject
 Open/Close	 Eject
 Display Call	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AV	 0
 Channel+	 Ch +
 Channel-	 Ch -
 Showview/Progra	 Guide

Original	Sustituto
 Timer Rec	 AV
 Rec OTR	 Rec
 Marker/Tape	 Options
 Jump/Zero Return	 Pre Ch
 Clock/Counter	 Yellow
 Counter Reset	 Green
 Tv/VCR	 TV/R
 VCR	 Smart
 DVD	 Media
 Setup Menu	 Menu
 DVD Menu	 D. Menu
 Up	 Up
 Down	 Down
 Right/TRK+	 Right
 Left/TRK-	 Left
 Enter/Select	 Ok
 Title	 Red





	Original	Sustituto	Original	Sustituto
	Return	BACK		
	Stop			
	Play			
	Pause			
	I<</- Index/Skip			
	<<			
	>>			
	>>I/Skip/Index +			
	I>/Slow	D		
	Cancel	EXIT		
	Repeat A-B	TEXT		
	Zoom	3D		
	Angle	LIST		
	Play Mode	+		Shift + Play
	Subtitle	SUBT		
	Audio	DUAL		

