



Original	Sustituto
 Standby	 Power
 Equalizzatore	 Shift + Sound / Title
 Surround	 Shift + Eject / Surround
 Eject	 Eject / Surround
 Audio	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 Angle	 Info / Angle
 4	 4
 5	 5
 6	 6
 Sottotitoli	 Subtitle / EQ
 7	 7
 8	 8
 9	 9
 Ricerca	 Red / Netflix / Search

Original	Sustituto
 Canc	 Exit / Cancel / Clear
 0/10	 0
 10+	 Guide / EPG / -/-
 Titolo	 Sound / Title
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Programm	 TV/Radio /
 Down	 Down
 Display	 Display / Media
 PAL/NTSC	 D.Menu / Top
 Setup	 Setup / OPT /
 Digest	 Shift + D.Menu / Top Menu
 Vol+	 Vol+
 Mute	 Mute / Dimmer





Original	Sustituto
Mark	Fav / Marker / PC
Zoom	Zoom / Size
Vol-	Vol-
A-B	Yellow / YouTube / Repeat
Ripeti	Back / Return
Slow	Shift + Play /
<</F.RWD	<< / Tune-
F.FWD/>>	>> / Tune+
l<< / Skip-	l<< / Preset-
>>l / Skip+	>>l / Preset+
Stop	Stop / Hold
Pause/Step	Pause / Step / Freeze
Play	Play / Slow

Original	Sustituto

