 

 







 



 
 


 
 
 


 







Original	Sustituto
 Power	 Power
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 O)/I-II/Audio	 Audio / Lang I/II
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear

Original	Sustituto
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 CH+	 CH+ / Page+
 Index	 Display / Media
 Vol+	 Vol+
 CH-	 CH- / Page-
 List/Repeat	 Smart / List
 Vol-	 Vol-
 ♥/Title	 Fav / Marker / PC
 Sleep/Menu	 Sleep / Timer
 EPG/Setup	 Guide / EPG / -/-
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 <<	 << / Tune-





Original		Sustituto	
	Green		Green / APP / Repeat
	>>		>> / Tune+
	Yellow		Yellow / YouTube / Repeat
	I<<		I<< / Preset-
	Blue		Blue / Prime Video / Random
	>>I		>>I / Preset+
	[=]		Text / Goto
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	[=+]		Picture / Format
	Stop/Still		Stop / Hold
	Radio/Open/Close		TV/Radio /
	[=◆]/[++]		Zoom / Size
	[=x]		Setup / OPT /
	[=o]/Subtitle		Subtitle / EQ
	DMP		D.Menu / Top
	Rec		Rec / Rec Mode

Original	Sustituto

