 

 
 

 
 


 


 


 
 
 

 







Original	Sustituto
 Power	 Power
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 O)/I-II/Audio	 Audio / Lang I/II
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear

Original	Sustituto
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 CH+	 CH+ / Page+
 Index	 Display / Media
 Vol+	 Vol+
 CH-	 CH- / Page-
 List/Repeat	 Smart / List
 Vol-	 Vol-
 ♥/Title	 Fav / Marker / PC
 Sleep/Menu	 Sleep / Timer
 EPG/Setup	 Guide / EPG / -/-
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 <<	 << / Tune-





Original	Sustituto
 Green	 Green / APP / Repeat
 >>	 >> / Tune+
 Yellow	 Yellow / YouTube / Repeat
 I<<	 I<< / Preset-
 Blue	 Blue / Prime Video / Random
 >>I	 >>I / Preset+
 [=]	 Text / Goto
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 [=+]	 Picture / Format
 Stop/Still	 Stop / Hold
 Radio/Open/Close	 TV/Radio /
 [=♦]/[++]	 Zoom / Size
 [=x]	 Setup / OPT /
 [=o]/Subtitle	 Subtitle / EQ
 DMP	 D.Menu / Top
 Rec	 Rec / Rec Mode

Original	Sustituto

