




 

 
 
 
 

 


Original	Sustituto
Power	Power
Source	SRC
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TTX/MIX	TEXT
PRE-CH	P/C / FAV
Vol+	VOL +
Vol-	VOL -
Mute	MUTE

Original	Sustituto
P+	CH +
P-	CH -
CH List	TV/R
Content	Shift + VOD
Menu	MENU
Guide	-/-- / EPG
Tools	OPT+
Info	INFO
Return	BACK
Exit	EXIT
Up	UP
Down	DOWN
Right	RIGHT
Left	LEFT
Enter	OK
Red	Red (A)
Green	Green (B)





Original	Sustituto
 Yellow	 Yellow (C)
 Blue	 Blue (D)
 Media. P	 MEDIA
 Internet/@TV	 VOD
 Dual I-II	 Audio
 AD	 WIDE
 P.Size	 V-FOR
 Subt.	 Subt.
 <<	 Rewind
 Pause	 Pause
 >>	 Fast Forward
 Rec	 Rec
 Play	 Play
 Stop	 Stop

Original	Sustituto

