 

 

 
 
 
 

 
 
 





 

 

 
 

 


 
 










 

 

 



 







Original	Sustituto
 Power	 Power
 Source	 AV
 Subt.	 Subt
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 PRE-CH	 Pre Ch
 TTX/MIX	 Text
 HDMI	 Smart

Original	Sustituto
 DTV	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 PR+	 Ch +
 PR-	 Ch -
 CH.List	 List
 Menu	 Menu
 Media.P	 Media
 Guide	 Guide
 Tools	 Options
 Info	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok





Original	Sustituto
Return	Back
Exit	Exit
Red/A	Red
Green/B	Green
Yellow/C	Yellow
Blue/D	Blue
PIP	3D
PIP Down	I<<
PIP Up	>>I
P.Mode	+ Shift + Format
SRS	Dual
P.Size	Format
Still	D. Menu
Rec	Rec
Stop	Stop
<<	<<
Play	Play

Original	Sustituto
Pause	Pause
>>	>>

