



 
 
 
 
 


 


 




 
 
 


 
 

 








 



 
 
 
 
 




 
 







 




 





Original	Sustituto	Original	Sustituto
	Power		Power
	Source		AV
	HDMI		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -

Original	Sustituto	Original	Sustituto
	Mute		Mute
	CH List		List
	PR+		Ch +
	PR-		Ch -
	Menu		Menu
	Media. P		Smart
	Guide		Guide
	Tools		Options
	Info		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Return		Back
	Exit		Exit
	Red/A		Red





Original	Sustituto	Original	Sustituto
 Green/B	 Green		
 Yellow/C	 Yellow		
 Blue/D	 Blue		
 Family Story	 Media		
 Search	 TV/R		
 Dual I/II	 Dual		
 Support	 Sleep		
 P.Size	 Format		
 AD/Subt	 Subt		
 <<<	 <<<		
 I<<<	 I<<<		
 Pause	 Pause		
 >>>	 >>>		
 >>I	 >>I		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

