
 





 

 



 



 


 




Original	Sustituto	Original	Sustituto
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TTX/MIX		Text / Goto
	0		0
	PRE-CH		Back / Return
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Original	Sustituto	Original	Sustituto
	Vol-		Vol-
	CH List		Shift + Smart / List
	CH List		Display / Media
	P-		CH- / Page-
	Menu		Menu / Home
	Smart Hub		Smart / List
	Guide		Guide / EPG / -/-
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Shift + Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red/A		Red / Netflix / Search





Original	Sustituto
B Green/B	APP REPEAT Green / APP / Repeat
C Yellow/C	YouTube REPEAT A-B Yellow / YouTube / Repeat
D Blue/D	Prime Video RANDOM Blue / Prime Video / Random
E-MANUAL E-Manual	TOP MENU D.MENU D.Menu / Top
SPORTS Sports	PROGRAM TV/RADIO TV/Radio /
AD/SUBT. AD/SUBT	EQ SUBTITLE Subtitle / EQ
AD/SUBT. AD/SUBT	LANG I/II AUDIO Audio / Lang I/II
Stop	HOLD Stop / Hold
<<	TUNE- << / Tune-
I<<	PRESET- I<< / Preset-
Play	SLOW Play / Slow
Pause	STEP-FREEZE Pause / Step / Freeze
>>	TUNE+ >> / Tune+
>>I	PRESET+ >>I / Preset+

Original	Sustituto

