


 










Original		Sustituto		Original		Sustituto	
	Power		Power		Info		Info / Angle
	Open/Close		Eject / Surround		Pause		Pause / Step / Freeze
	DVD		2		TV CH+		CH+ / Page+
	USB		8		>>		>> / Tune+
	HDMI Sel.		0		Tv Vol-		Vol-
	Marker		Fav / Marker / PC		I<<		I<< / Preset-
	EZ View		Display / Media		Stop		Stop / Hold
	Video Sel.		4		Play		Play / Slow
	Repeat		Green / APP / Repeat		>>I		>>I / Preset+
	A-B Repeat		Yellow / YouTube / Repeat		TV CH-		CH- / Page-
	Subtitle		Subtitle / EQ		Menu		Menu / Home
	Disc Menu		D.Menu / Top		Up		Up
	Title Menu		Smart / List		Return		Back / Return
	Tv Source		AV / Input / RDS		Left		Left
	Audio		Audio / Lang I/II		Enter		OK
	Tv Vol+		Vol+		Right		Right
	<<		<< / Tune-		Tools		Setup / OPT /



Tools



Original	Sustituto
 Down	 Down
 Exit	 Exit / Cancel / Clear

Original	Sustituto

