 



 







 



 

 

 



 

 

 

 

 

 

 



 

 

 

 

 



 



 

 

 







 

 

 

 

 

 
 
 

 

 

 



 

 





 




| Original | Sustituto | Original | Sustituto |
|---|--|--|---|
|  Standby/On |  Power |  Repeat |  Shift + Green / APP / |
|  Open/Close |  Eject / Surround |  >> |  >> / Preset+ |
|  Tv Standby/On |  Shift + Power |  << |  << / Tune- |
|  1 |  1 |  Stop |  Stop / Hold |
|  2 |  2 |  Play/Pause |  Play / Slow |
|  3 |  3 |  >> |  >> / Tune+ |
|  4 |  4 |  Tv Vol+ |  Vol+ |
|  5 |  5 |  Mute |  Mute / Dimmer |
|  6 |  6 |  PR+ |  CH+ / Page+ |
|  7 |  Display / Media |  Tv Vol- |  Vol- |
|  7 |  7 |  PR- |  CH- / Page- |
|  8 |  8 |  Menu |  Menu / Home |
|  9 |  9 |  Return |  Back / Return |
|  9 |  AV / Input / RDS |  Up |  Up |
|  0 |  0 |  Left |  Left |
|  I<< |  I<< / Preset- |  OK |  OK |
|  Subtitle |  Subtitle / EQ |  Right |  Right |





| Original | Sustituto |
|--|---|
|  Down |  Down |
|  Title List/Disc Menu |  D.Menu / Top |
|  Info |  Info / Angle |
|  Exit |  Exit / Cancel / Clear |
|  Play List/Title Menu |  Smart / List |
|  Red/A |  Red / Netflix / Search |
|  Green/B |  Green / APP / Repeat |
|  Yellow/C |  Yellow / YouTube / Repeat |
|  Blue/D |  Blue / Prime Video / Random |
|  Copy |  Picture / Format |
|  Marker |  Fav / Marker / PC |
|  Rec Mode |  Shift + Rec / Rec Mode |
|  Timer |  Sleep / Timer |
|  Rec |  Rec / Rec Mode |
|  Pause/Rec |  Pause / Step / Freeze |
|  Pause/Time Shift | |
| | |
| | |

| Original | Sustituto |
|----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

