
 
















Original	Sustituto
 Power	 Power
 Tv/DTV	 TV/Radio /
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 PRE-CH	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer

Original	Sustituto
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-
 Guide	 Guide / EPG / -/--
 Menu	 Menu / Home
 W.Link	 Display / Media
 Tools	 Setup / OPT /
 Return	 Back / Return
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Info	 Info / Angle
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat



