



Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I-II/Dual	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 P.Mode	 Picture / Format
 P.Size	 Zoom / Size
 Tv/DTV	 TV/Radio /
 D.Menu	 D.Menu / Top
 PIP	 Setup / OPT /
 Text/MIX	 Text / Goto
 Source	 AV / Input / RDS
 Menu	 Menu / Home

Original	Sustituto
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter/OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 PRE-CH	 Back / Return
 Vol+	 Vol+
 CH.List	 Smart / List
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4



 

 

 



 





 



 

 

 

 


 
 

 

 



 
 





Original	Sustituto
Power	Power
Mute	Mute / Dimmer
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
Menu	Menu / Home
Up	Up
Info	Info / Angle
Left	Left
Enter/OK	OK
Right	Right
Exit	Exit / Cancel / Clear
Down	Down
Vol+	Vol+
Vol-	Vol-

Original	Sustituto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0





Original	Sustituto
 Cable	 Display / Media
 Power	 Power
 Power Cable	 Shift + Power
 Source	 AV / Input / RDS
 1	 1
 1 Cable	 Shift + 1
 2	 2
 2 Cable	 Shift + 2
 3	 3
 3 Cable	 Shift + 3
 4	 4
 4 Cable	 Shift + 4
 5	 5
 5 Cable	 Shift + 5
 6	 6
 6 Cable	 Shift + 6
 7	 7

Original	Sustituto
 7 Cable	 Shift + 7
 8	 8
 8 Cable	 Shift + 8
 9	 9
 9 Cable	 Shift + 9
 0	 0
 0 Cable	 Fav / Marker / PC
 PRE-CH	 Back / Return
 D.Menu	 D.Menu / Top
 HDMI	 Shift + 0
 <<	 << / Tune-
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Vol+	 Vol+
 P+	 CH+ / Page+



