



 

 



 





 

 


 

 
 
 
 


 

 
 







 
 




Original	Sustituto
 Power	 Power
 TV Power	 Shift + Power
 TV Channel -	 Ch -
 TV Channel +	 Ch +
 TV Volume -	 Shift + Vol -
 TV Volume +	 Shift + Vol +
 TV / Video	 TV/R
 DVD	 Smart
 Tuner Band	 Shift + Smart
 Aux	 Media
 Title	 Info
 Menu	 Menu
 Audio Mo/St	 Dual
 Subtitle	 Subt
 Display	 Shift + Info
 Return	 Back
 Go To	 Guide

Original	Sustituto
 I<<	 I<<
 Stop	 Stop
 Play / Pause	 Play
 Play / Pause	 Pause
 >>I	 >>I
 << / Tuning	 <<
 >> / Tuning Up	 >>
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Volume -	 Vol -
 Volume +	 Vol +
 DSP Mode	 List
 Effect	 3D
 Mute	 Mute





Original	Sustituto
Sleep	Sleep
1 / RDS Display	1
2	2
3 / TA	3
4 / PTY -	4
4 / PTY -	+ Shift + Left
5 / PTY Search	5
5 / PTY Search	+ Shift + Ok
6 / PTY +	6
6 / PTY +	+ Shift + Right
7	7
8	8
9	9
0	0
Sound Edit	Red
SPK Mode	Green
Pro Logic	Yellow

Original	Sustituto
Test Tone	Blue
Slow	+ Shift + Play
Angle	Format
Setup	Options
TV System	Eject
DRC	AV
Clear	Exit
Repeat	Text
Repeat A-B	+ Shift + Text
Program	+ Shift + Sleep
Step	+ Shift + Pause
Remain	+ Shift + Stop

