
 



 















 

 




 








Original	Sustituto
 Power	 Power
 TTX / Mix	 Text
 TV / DTV	 Shift + TV/R
 Guide	 Guide
 CH. List	 List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 APP	 Media
 Pre-CH / Back	 Pre Ch

Original	Sustituto
 Pre-CH / Back	 Back
 Mute	 Mute
 Vol +	 Vol +
 Vol -	 Vol -
 P +	 Ch +
 P -	 Ch -
 Source	 AV
 Menu	 Menu
 D.Menu	 D. Menu
 Info	 Info
 Exit	 Exit
 Up	 Up
 Left	 Left
 Enter / OK	 Ok
 Right	 Right
 Down	 Down
 Red	 Red





Original	Sustituto	Original	Sustituto
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Subtitle		Subt
	P.Size		Format
	Sleep		Sleep
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Dual I-II		Dual
	TV / Radio		TV/R
	ALT		Smart
	Text		Shift + Text
	PIP		Options
	Still		Pause
	PIP Swap		3D

