

 





Original	Sustituto
Power	Power
Tv	TV/R
PRE CH	Pre Ch
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Vol+	Vol +
Vol-	Vol -
Mute	Mute
Source	AV

Original	Sustituto
P+	Ch +
P-	Ch -
Menu	Menu
Exit	Exit
Return	Back
Tools	Options
Guide	Guide
Enter	Ok
Up	Up
Down	Down
Left	Left
Right	Right
CH LIST	List
Info	Info
TTX/MIX	Text
SUBT	Subt
SRS	Smart





Original		Sustituto		Original		Sustituto	
	P SIZE		Format				
	Dual		Dual				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	<<		<<				
	>>		>>				
	Rec		Rec				
	AD		Shift + Subt				
	FAV CH		Shift + Pre Ch				

