


 
 
 
 
 

 
 




 



 
 

 




Original	Sustituto
 DVD	 Power
 Tv Standby/On	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv/DVD	 TV/R
 Audio	 Dual
 DVD	 Smart
 HDD	 Media
 Input	 AV

Original	Sustituto
 Tv Vol+	 Vol +
 Tv Vol-	 Vol -
 Prog Up	 Ch +
 Prog Down	 Ch -
 Open/Close	 Eject
 CM Skip	 Yellow
 I<<	 I<<
 <	 Shift + Left
 >	 Shift + Right
 >>	 >>
 <<	 <<
 Stop	 Stop
 Play/Pause	 Play
 >>	 >>
 Title List/Disc Menu	 D. Menu
 Menu	 Menu
 Anykey	 Red






 
	Original	Sustituto
	Play List/Title Menu	 List
	Return	 Back
	Cancel	 Exit
	Up	 Up
	Down	 Down
	Right	 Right
	Left	 Left
	OK	 Ok
	Info	 Info
	Repeat	 Text
	Repeat A-B	 Green
	Subtitle	 Subt
	Rec	 Rec
	Rec Pause	 Pause
	Rec Mode	 Shift + Rec
	Timer	 Shift + AV
	Copy	 Blue

	Original	Sustituto
	Marker	 3D





Original	Sustituto
 Tv Standby/On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Mute	 Mute
 Tv/DVD	 TV/R
 Input	 AV
 Prog Up	 Ch +
 Prog Down	 Ch -
 Tv Vol+	 Vol +

Original	Sustituto
 Tv Vol-	 Vol -

