






 






























Original	Sustituto		
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<</ <<		<< / Tune-
	>>/>>		>> / Tune+
	AD/Subt.		Audio / Lang I/II
	TTX/MIX		Text / Goto
	Samsung TV		TV/Radio /
	Settings		Setup / OPT /
	Source		AV / Input / RDS
	Home		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK

Original	Sustituto		
	Right		Right
	Exit		Exit / Cancel / Clear
	PRE-CH		Fav / Marker / PC
	Down		Down
	Vol+		Vol+
	CH List		Smart / List
	Ch+		CH+ / Page+
	Vol-		Vol-
	Ch-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Original	Sustituto	Original	Sustituto
9	9		
GUIDE	Guide		
0	0		
Red (A)	Red / Netflix / Search		
Green (B)	Green / APP / Repeat		
Yellow (C)	Yellow / YouTube / Repeat		
Blue (D)	Blue / Prime Video / Random		
Return	Back / Return		
Netflix	Shift + Red / Netflix /		
video prime	Shift + Blue / Prime		

