



Original	Sustituto
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TTX/MIX
	0
	PRE-CH
	Vol+
	Mute
	CH+

Original	Sustituto
	Vol-
	CH List
	CH-
	Netflix
	Home
	prime video
	Samsung TV
	Up
	Disney+
	Left
	Enter
	Right
	Return
	Down
	Exit
	Red
	Green





Original	Sustituto
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Settings	Setup / OPT /
Info	Info / Angle
AD/SUBT.	Subtitle / EQ
Stop	Stop / Hold
<<<	<<< / Tune-
I<<<	I<<< / Preset-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>>	>>> / Tune+
>>>I	>>>I / Preset+

Original	Sustituto

