


 
 

 











 


 


 


 











 









Original	Sustituto
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+

Original	Sustituto
 Vol-	 Vol-
 CH List	 Smart / List
 CH-	 CH- / Page-
 Netflix	 Shift + Red / Netflix /
 Home	 Menu / Home
 prime video	 Shift + Blue / Prime
 WWW	 Display / Media
 Up	 Up
 Guide	 Guide / EPG / -/-
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Sustituto	Original	Sustituto
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Settings	 Setup / OPT /		
 Info	 Info / Angle		
 AD/SUBT.	 Subtitle / EQ		
 Stop	 Stop / Hold		
 <<	 << / Tune-		
 I<<	 I<< / Preset-		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 >>I	 >>I / Preset+		

Original	Sustituto	Original	Sustituto

