

 
 


 
 
 

 
 





 




 
 
 

 
 
 




 


 

 
 

 




 

 





 


 




 

 








Original	Sustituto
	 Power
	 Info
	 Mute
	 Dual
	 Ok
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 +  Shift + Guide
	 Exit

Original	Sustituto
	 Menu
	 Red
	 Green
	 Yellow
	 Blue
	 Up
	 Down
	 Right
	 Left
	 Ch +
	 Ch -
	 Vol +
	 Vol -
	 Play
	 Pause
	 Stop
	 <<





Original		Sustituto	
[Next]	>>	[Next]	>>
[TV]	[TV]	[SEARCH TV/R]	TV/R
[D-MENU]	D-Menu	[HOME SMART]	Smart
[TV]	TV	[APP MEDIA]	Media
[AV]	AV	[TIMER AV]	AV
[P<P]	P<P	[FAV PRE-CH]	Pre Ch
[PP]	PP	[E-MANUAL D.MENU]	D. Menu
[Repeat]	[≡]	[REPEAT TEXT]	Text
[EQ]	[≡o]	[AD SUBT]	Subt
[E?]	[≡+]	[PICTURE FORMAT]	Format
[EX]	[≡x]	[ECO 3D]	3D
[E] (diamond)	[≡◆]/Wide	[SHIFT] + [PICTURE FORMAT]	Shift + Format
[E] (?)	[≡?]	[SETTINGS OPT]	Options
[E] (i)	[≡i]/Guide	[GUIDE]	Guide
[E] (::)	[::]/Subtitle	[RETURN BACK]	Back

Original	Sustituto




 

 

 
 












 


Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--/+10	 Guide
 Exit	 Exit
 Red/↑/Return	 Red
 Green/↓/Subtitle	 Green
 Yellow/Audio	 Shift + Yellow
 Blue/Angle	 Blue

Original	Sustituto
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 D-Menu	 Smart
 <<	 <<
 >>	 >>
  <<	  <<
 >>	 >>
 Time	 Shift + AV
 Zoom	 Shift + Eject
 Program	 Sleep
 Search Mode	 AV
 Repeat	 Text
 A-B	 Shift + Play
 C	 Yellow
 Title	 Info
 Display	 Shift + Info





Original	Sustituto
 Open/Close	 Eject
 Menu	 Menu
 Select	 Ok
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Sustituto

