





 


 

 

 


 
 
 



 

 


 









 





 
 

 
 

 
 
 




 

 
 
 










 







 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 

 
 




Original	Sustituto	Original	Sustituto
	Power		Power
	DS		Media
	Tv/Source		AV
	Wide		Format
	Mute		Mute
	D/A / P↔P		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/[≡o]		Shift + Guide
	CS		Smart
	[Y]/[≡?]		Exit
	P+		Ch +
	P-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Menu/[≡i]		Menu
	Return/[≡x]		Back
	Info		Info
	Guide		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok




















 








Original		Sustituto		Original	Sustituto
	Vol+		Vol +		
	Vol-		Vol -		
	Rec		Rec		
	Pause		Pause		
	Power Down		Shift + Power		
	Stop		Stop		
	Play		Play		
	<<		<<		
	>>		>>		
	Surround		Dual		
	Bass		Options		
	→←		3D		
	▼/A/B		List		
	Subtitle		Subt		
	[≡◆]		TV/R		
	[≡+]		D. Menu		
	TXT/TV		Text		





Original		Sustituto		Original		Sustituto	
	Power Down		Power				
	Menu/[≡i]		Menu				
	Enter		Ok				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	Pause		Pause				
	Stop		Stop				
	Play		Play				
	Prev		I<<				
	Next		>>I				

