
 


























 









Original	Sustituto
 Tv/Input	 AV / Input / RDS
 Power	 Power
 Wide	 Picture / Format
 Mute	 Mute / Dimmer
 [ _ ]/[▼]/[≡?]	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--/[≡o]	 Guide / EPG / -/--
 0	 0
 CS	 Smart / List

Original	Sustituto
 Up	 Up
 P+	 CH+ / Page+
 Left	 Left
 Vol-	 Vol-
 F/OK	 OK
 Vol+	 Vol+
 Right	 Right
 Down	 Down
 P-	 CH- / Page-
 Menu	 Menu / Home
 →←	 Display / Media
 P↔P	 Fav / Marker / PC
 O/[≡x]	 Info / Angle
 [≡◆]	 Zoom / Size
 [≡+]	 Stop / Hold
 A1	 Red / Netflix / Search
 TXT/TV	 Text / Goto



