


 







 











 


Original	Sustituto
 Power	 Power
 Source (Games)	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV	 TV/Radio /
 0	 0
 Recall	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+

Original	Sustituto
 Vol-	 Vol-
 World/Internet	 Smart / List
 PR-	 CH- / Page-
 Menu	 Menu / Home
 Q.Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 i	 Info / Angle
 Movie-Music-Phot	 Display / Media
 Guide	 Guide / EPG / -/-
 */o	 Picture / Format
 */o..	 Setup / OPT /





Original	Sustituto	Original	Sustituto
 [=]/Text	 GOTO TEXT Text / Goto		
 Red	 NETFLIX SEARCH Red / Netflix / Search		
 Green	 APP REPEAT Green / APP / Repeat		
 Yellow	 YouTube REPEAT A-B Yellow / YouTube / Repeat		
 Blue	 Prime Video RANDOM Blue / Prime Video / Random		
 LANG.	 LANG I/II AUDIO Audio / Lang I/II		
 [=]..	 EQ SUBTITLE Subtitle / EQ		
 [-o-]	 SIZE ZOOM Zoom / Size		
 <<	 TUNE- << / Tune-		
	 STEP-FREEZE    Pause / Step / Freeze		
 >>	 TUNE+ >> / Tune+		
 .	 REC MODE Rec / Rec Mode		
 ▶	 SLOW ▶ Play / Slow		
 ■	 HOLD ■ Stop / Hold		

